


# NAVODILA ZA UPORABO OMARIC



## ZAKLEPANJE

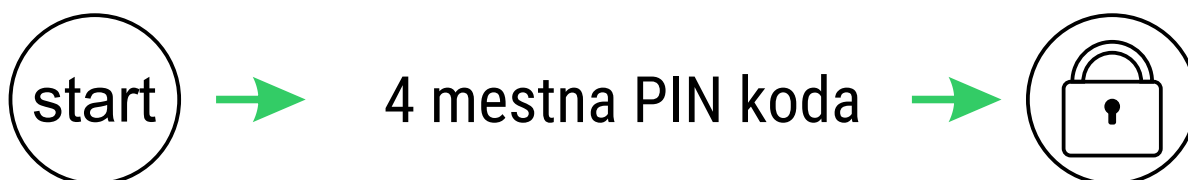



## ODKLEPANJE



### ZAKLEPANJE OMARICE

- IZBERITE PROSTO OMARICO IN VSTAVITE SVOJE OSEBNE STVARI
- ZAPRITE OMARICO PRITISNITE TIPKO  IN NA ŠTEVILČNICI VPIŠITE POLJUBNO 4 MESTNO PIN KODO. ZAKLJUČITE S KLIKOM NA GUMB 
- PREVERITE, DA JE OMARICA ZAKLENJENA

### ODKLEPANJE OMARICE

- POIŠČITE SVOJO OMARICO
- NA KLJUČAVNICI PRITISNITE TIPKO  IN NA ŠTEVILČNICI VPIŠITE VAŠO 4 MESTNO PIN KODO. ZAKLJUČITE S KLIKOM NA GUMB 

# PIN LOCK USER INSTRUCTIONS



## LOCKING



## UNLOCKING



### LOCKING THE CABINET

- Touch  button on the bottom left corner of keypad. The LED on the Lock (upper right) will flash “Green” and make an audible tone (“beep”) to indicate a successful “key press”
- Enter your 4 Digit Code, for example 1-2-3-4. With each number selection the LED will flash “Green” and an audible tone will be heard to indicate successful “key press”.
- Touch the  button on the bottom right corner of keypad. The LED on the Lock will flash “Green” and an audible tone will be heard.
- The Lock is now Locked. The LED will flash every second to tell users the lock/locker is “IN Use”.

### UNLOCKING THE CABINET

- Repeat the steps above, with the same code entered to lock the lock.
- The Sequence to lock/unlock is: START-#-#-#-LOCK ICON with the LED flash and audible tone with each successful key touch.
- If the LED on the lock is not flashing, the lock is in the “un-locked” position and the locker is probably free to be used.